

Lane Change Assistance

From January 2011



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Lane Change Assistance Control Module


- J533 Data Bus on Board Diagnostic Interface
- J769 Lane Change Assistance Control Module
- ST4 Fuse Panel 4
- SF8 Fuse 8 (On Fuse Panel F)
- T12t 12-Pin Connector
- T32b 32-Pin Connector

- 51 Ground Connection in Luggage Compartment, Right
- 386 Ground Connection 21 (in Main Wiring Harness)
- 387 Ground Connection 22 (in Main Wiring Harness)

- B108 CAN Bus Extended High Connection 1 (in Main Wiring Harness)
- B109 CAN Bus Extended Low Connection 1 (in Main Wiring Harness)


- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Avant
- *3 Through February 2011
- *4 Data Bus Wire (CAN Bus)

Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

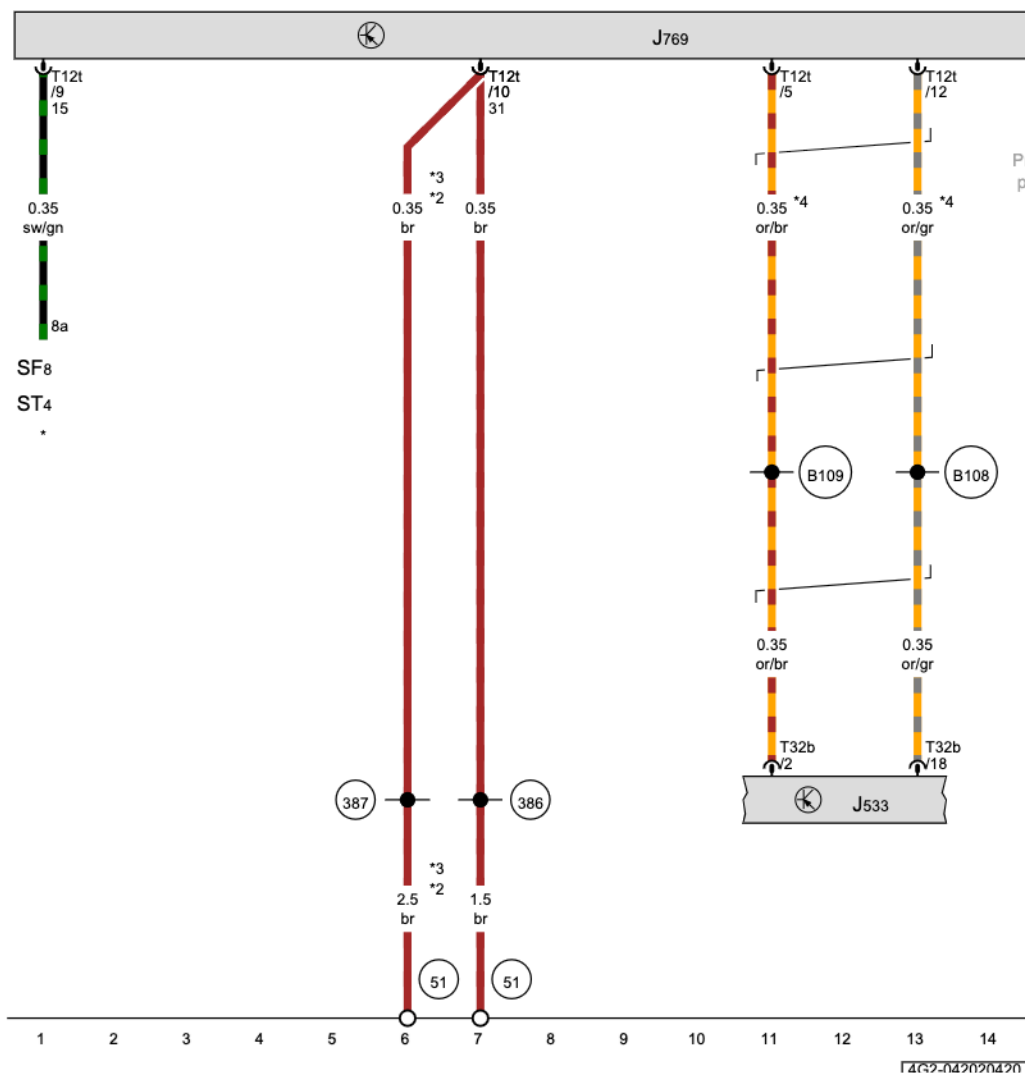

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Lane Change Assistance Button, Lane Change Assistance Control Module, Lane Change Assistance Indicator Lamp

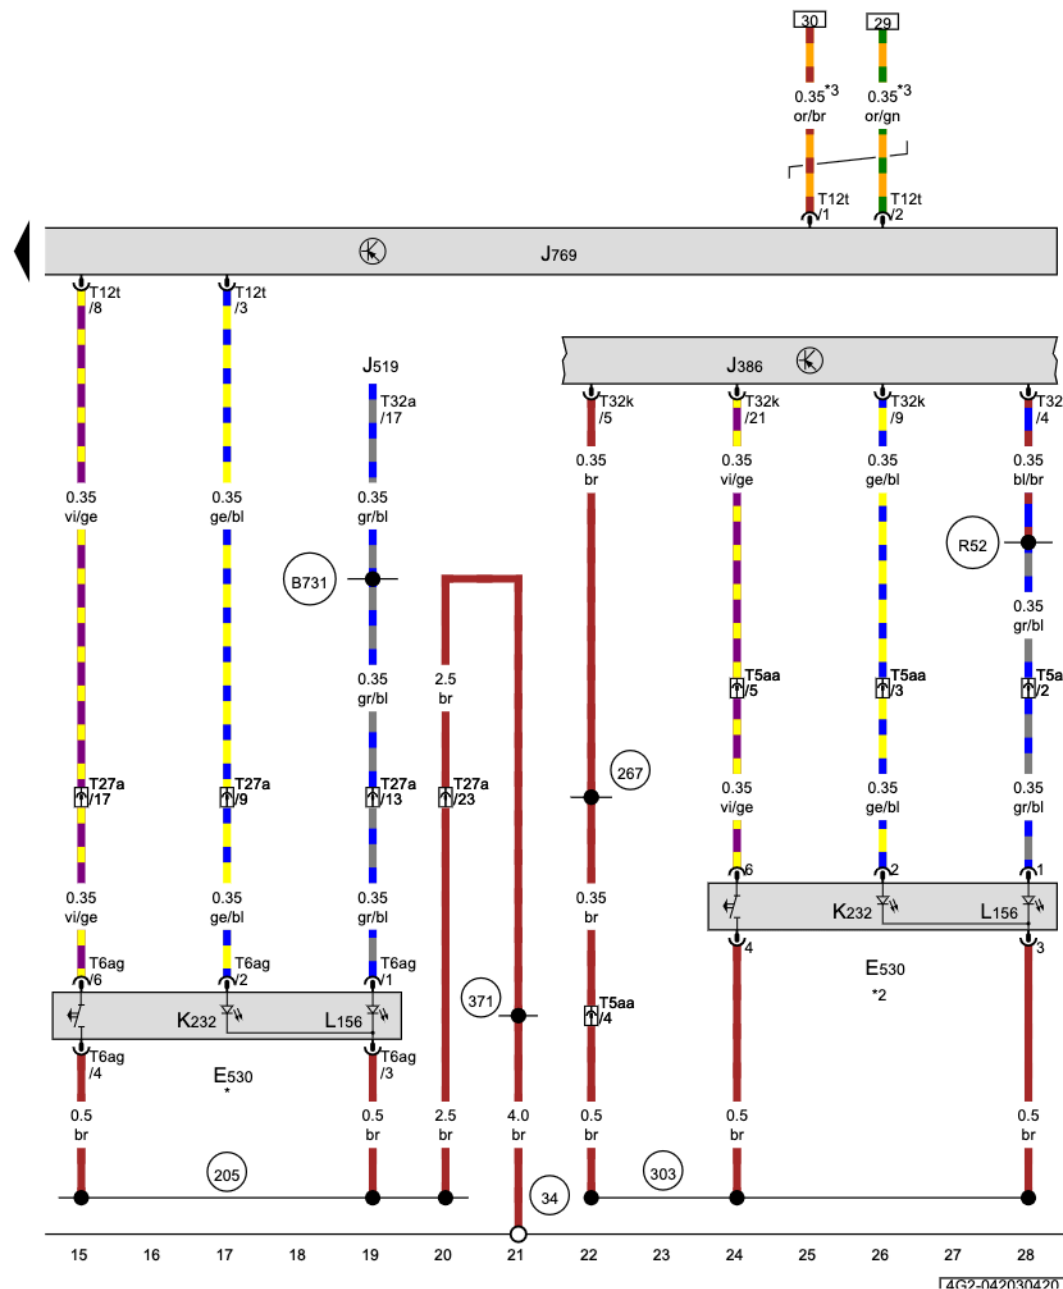

- E530 Lane Change Assistance Button
- J386 Driver Door Control Module
- J519 Vehicle Electrical System Control Module
- J769 Lane Change Assistance Control Module
- K232 Lane Change Assistance Indicator Lamp
- L156 Switch Illumination Bulb
- T5aa 5-Pin Connector, On the Lower Left A-Pillar
- T6ag 6-Pin Connector
- T12t 12-Pin Connector
- T27a 27-Pin Connector, On the Left A-Pillar
- T32a 32-Pin Connector
- T32k 32-Pin Connector


- 34 Ground Connection Under Driver Seat
- 205 Ground Connection (in Driver Door Wiring Harness)
- 267 Ground Connection 2 (in Driver Door Wiring Harness)
- 303 Ground Connection 3 (in Driver Door Wiring Harness)
- 371 Ground Connection 6 (in Main Wiring Harness)
- B731 Connection 58s (in Main Wiring Harness) 1
- R52 Connection 58S (in Driver Door Wiring Harness)

* Through May 2011
 *2 From June 2011

Protected by copyright. Copyright for the reproduction of this document in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Lane Change Assistance Control Module 2, Lane Change Assistance Warning Lamp in Driver Exterior Rearview Mirror

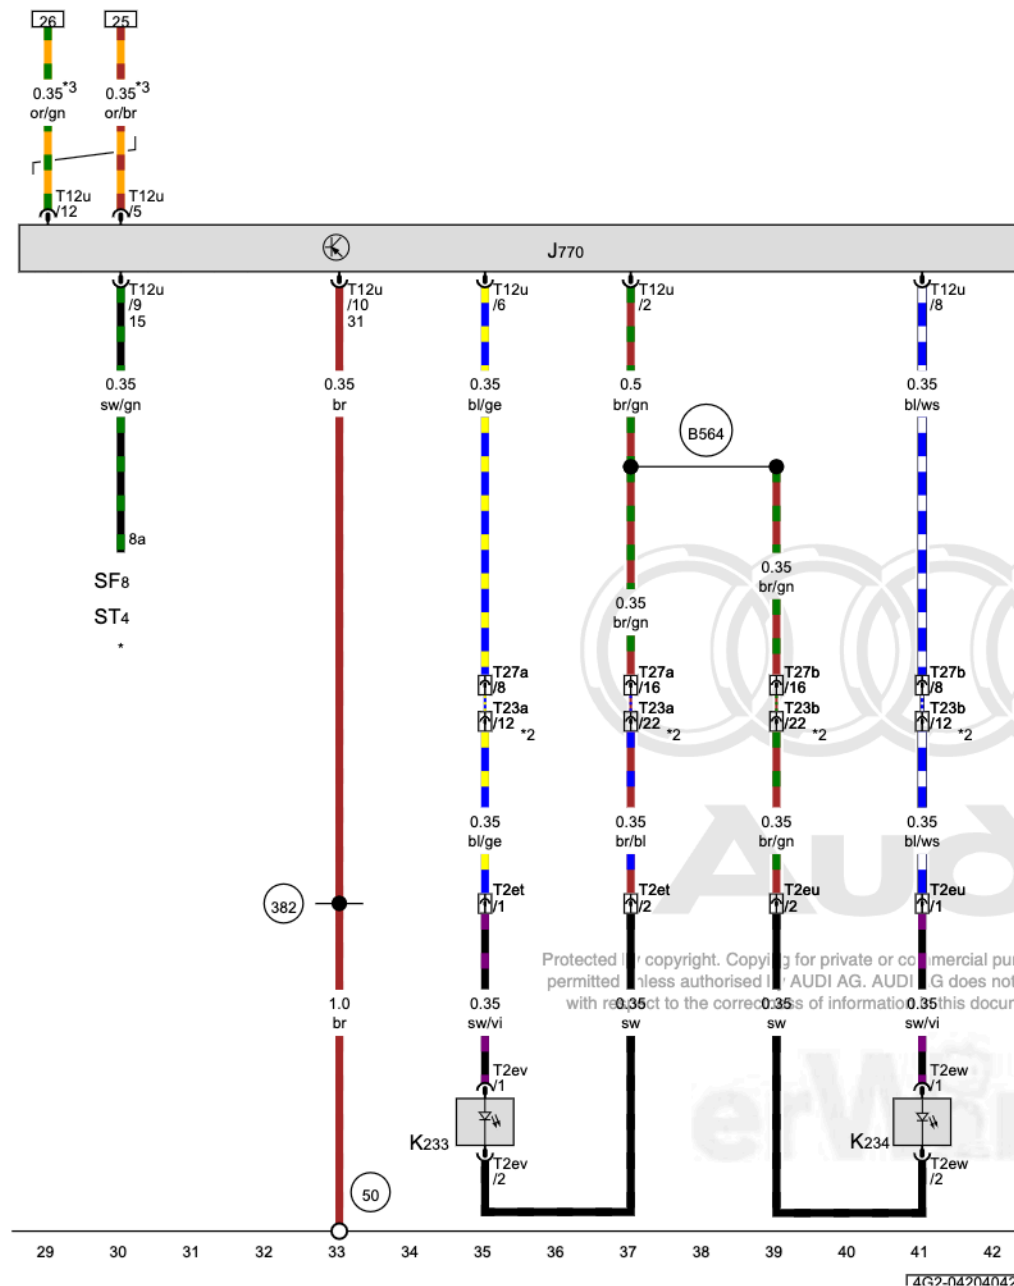

- J770 Lane Change Assistance Control Module 2
- K233 Lane Change Assistance Warning Lamp in Driver Exterior Rearview Mirror
- K234 Lane Change Assistance Warning Lamp in Front Passenger Exterior Rearview Mirror
- ST4 Fuse Panel 4
- SF8 Fuse 8 (On Fuse Panel F)
- T2et 2-Pin Connector, In the Driver Door
- T2eu 2-Pin Connector, In the Front Passenger Door
- T2ev 2-Pin Connector
- T2ew 2-Pin Connector
- T12u 12-Pin Connector
- T23a 23-Pin Connector, On the Left A-Pillar
- T23b 23-Pin Connector, On the Right A-Pillar
- T27a 27-Pin Connector, On the Left A-Pillar
- T27b 27-Pin Connector, On the Right A-Pillar

50 Ground Connection in Luggage Compartment, Left

382 Ground Connection 17 (in Main Wiring Harness)

B564 Connection 31 (in Main Wiring Harness)

- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 From June 2011
- *3 Data Bus Wire (CAN Bus)

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink